

COOKTOP PARTS
For Models: GR563LXSQ0, GR563LXSB0, GR563LXST0, GR563LXSS0 (White) (Black) (Biscuit) (Black Stainless)

30" ELECTRIC CERAN FREESTANDING RANGE SELF CLEAN OVEN

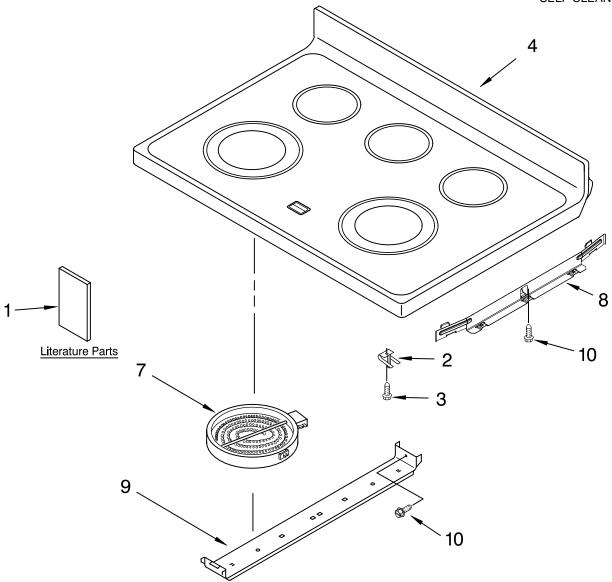


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9757143 9757142 9762761	Literature Parts Tech Sheet Installation Instructions Template, Anti-Tip English/French English/Spanish Safer Cooking Tips Owner's Manual	2 3 4	3149191 3196170 9763334 9763336 9763335	Cooktop White Black	7 8 9	8523698 8523700	\ /

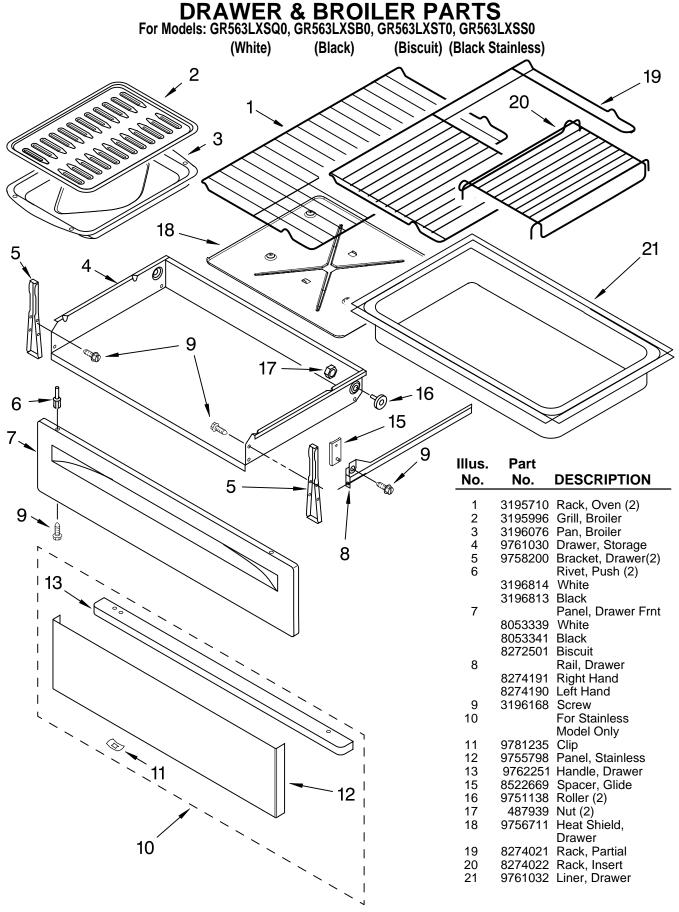

CHASSIS PARTS
For Models: GR563LXSQ0, GR563LXSB0, GR563LXST0, GR563LXSS0 (White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus No.		DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	9761300	Vent Tube Assbly	17	3195987	Support, Corner RR	38	9758238	Retainer, Side (2)
2		Support, Corner LR	18		Screen - Catalyst	39		Insulation
3	02.0000	Panel, Side (2)	19	3186116	Support, Oven (2)	40	3195813	Clip – Mounting
•	8053830		20	3186034	Bracket, Service	41		Latch, Door
		Black-Textured	21	9761958	Block, Terminal	42		Rod, Latch
		Biscuit-Textured	22	8274034	Back, Main	43	9757241	Latch Asy, Rear
4		Seal, Oven Flange	23	9757262	Switch, Door	44	9758701	Spacer, Door
5		Seal, Oven Door	24		Light Socket Assy	45	3196169	Screw
6		Element, Broil	25	311255	Bulb, Oven Light	46	9755769	Tray, Hidden
7	9755770	Element, Bake	26	9755771				Bake Element
		(Hidden Bake)	27		Sensor, Oven	47	9759689	
8	9757239		28	3196165	Screw	48	9758283	Cover, Box
9	3196548	Fuse, Thermal	29	3196179	Screw	49	112432	Nut (3)
10		Support, Front (2)	30	3196178	Screw	50	9760407	Bracket-Mounting
11		Foot, Front (2)	31	3400016	Screw			
12		Frame, Front	32	3196176	Screw	INSU	ILATION	
		(Not Serviced)	33	3196172				
13	8054068		34	W10031780				Insulation, Wrap
14	3196576		35	3196566				Insulation, Back
15	9760314	Rail, Base (2)	36	3196560			8272613	Insulation, Vent
16		Foot, Rear (2)	37	3196174	Screw			


CONTROL PANEL PARTS
For Models: GR563LXSQ0, GR563LXSB0, GR563LXST0, GR563LXSS0 (White) (Black) (Biscuit) (Black Stainless)

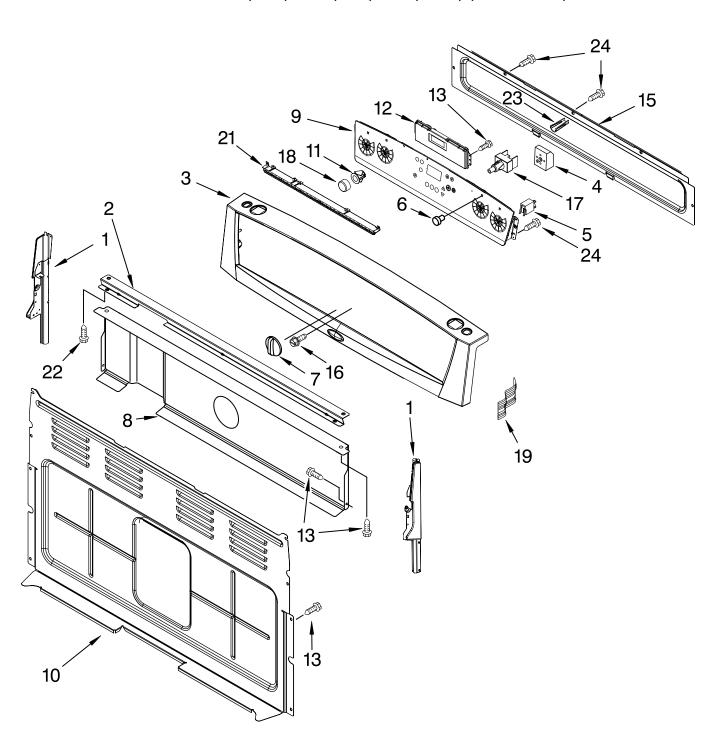

CONTROL PANEL PARTS
For Models: GR563LXSQ0, GR563LXSB0, GR563LXST0, GR563LXSS0 (White) (Black) (Biscuit) (Black Stainless)

Illus No.	. Part No.	DESCRIPTION
1		Endcap
'	W10009040	White Left Hand
	W10009050	
	W10009080	Black Left Hand
	W10009090	Black Right Hand
	W10009060	Biscuit Left Hand
	W10009070	Biscuit Right Hand
2	9762095	Bracket, Console
2 3		Panel, Backguard
	9762585	White
	9762586	Black
	9762587	
	9762588	Unvl Slvr for SS
4		Switch, Infinite
	9758060	Left Front
	3148951	Left Rear
	3148951	Right Rear
	9758060	Right Front
5	8523265	Light, Indicator
6 7	3196068	Lens, Light
7		Knob, Infinite (4)
	9757132	
	9758129	
	9757626	
8	8523280	
9		Glss Swtch Membrne
	9763545	
	9763546	
4.0	9763547	
10	9756999	Cover, Rear
11	0757400	Bezel, Keep Warm
	9757489	
	9758489	
40	9758488	
12 13	9762967 3196178	Control, Range
15	9756366	Screw Cover Boar
13	9750500	Cover, Rear
16	3400882	(Console) Screw
17	8272820	Switch
18	0212020	Button
10	9757492	
	9758491	
	9758490	
19		Cnntr,Cable Flex
21	9757358	
22	0.07000	Screw
	3196166	
	3196168	
	8281194	
23		Support, Glass
24	3196178	

DOOR PARTSFor Models: GR563LXSQ0, GR563LXSB0, GR563LXST0, GR563LXSS0 (White) (Black) (Biscuit) (Black Stainless)

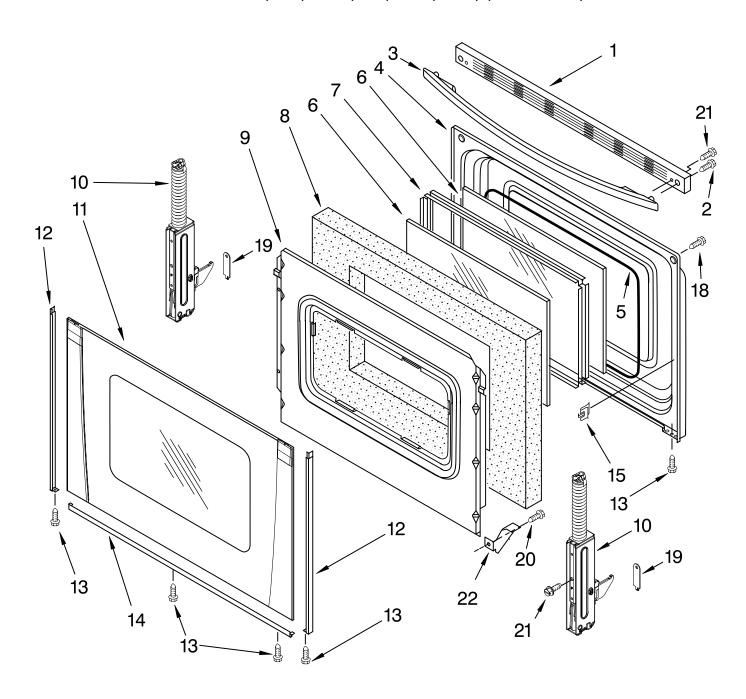

DOOR PARTSFor Models: GR563LXSQ0, GR563LXSB0, GR563LXST0, GR563LXSS0 (White) (Black) (Biscuit) (Black Stainless)

IIIus No.	. Part No.	DESCRIPTION
1		Trim, Top
2 3	9761975 9762391 9761976 9761977 3196164	White Black Biscuit Stainless Steel
	9761978 9761979 9761980 9761981 9761981	Black Biscuit Stainless Steel Unvrsl Slvr for SS
4 5	9761344 8522414	Liner, Door Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
8 9	8272618 9761357	Insulation, Door Retainer, Insul.
10 11	9761496	Hinge, Door (2) Glass, Outer
	W10010660 W10010680	White Black
	W10010680	Biscuit
	W10010690	Stainless Model
12	8523166	Trim, Side White Left Hand
	8523172	White Right Hand
	8523171	Black Left Hand
	8523165	Black Right Hand
	8523167 8523173	Biscuit Left Hand Biscuit Right Hand
	9762249	Unv Slvr LH
40	9762250	Unv Slvr RH
13 14	3196160	Screw Trim, Lower
• • •	8523175	White
	8523177	Black
15	8523178 3196025	Biscuit Clip, Glass (4)
18	3196161	Screw
19	9761517	Clip, Door Mntg
20 21	3196165 W10031790	Screw Screw
22	3196794	Bracket, Window(2)

OPTIONAL PARTS

For Models: GR563LXSQ0, GR563LXSB0, GR563LXST0, GR563LXSS0 (White) (Black) (Biscuit) (Black Stainless)

Illus. Part No. No. DESCRIPTION

Following Parts Not Illustrated

SPLICING WIRES--25FT.

LENGTH

242828 Wire, Black 12 Ga. 150° c 242821 Wire, Blue 14 Ga. 150°c 242822 Wire, Brown 14 Ga. 150°c 242830 Wire, Brown 14 Ga. 200°c 242823 Wire, Green 14 Ga. 150°c 242824 Wire, Orange 14 Ga. 150°c 242825 Wire, Red 14 Ga. 150°c 242831 Wire, Red 14 Ga. 200°c 242827 Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

799832 Kit, Porcelain Repair (White) 242756 Touch–Up Self–Clean(1/2 Pt) 261582 Grease Illus. Part No. No. DESCRIPTION

INSULATION

261514 Insulation, Fiberglass (1–1/2" x 24" x 120") 240132 Insulation, Fiberglass (2–1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017 White 4392899 Biscuit 511873 White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930 White 4392901 Biscuit 285006 Superior Black 206922 Primer (White)

PAINT, BULK (1 qt.)

799344 White (Uncut) 4392900 Biscuit (Uncut) Illus. Part No. No. DESCRIPTION

ACCESSORY PARTS

241430 Foil, Aluminum Oven (18" x 25') 3184478 Cleaner, Glass

ANTI-TIP KIT

W10017440 Anti-Tip Kit

WIRING HARNESS PARTS

9762815 Harness, Wire
(Cooktop Left)
9763105 Harness, Wire
(Cooktop Right)
9762963 Harness, Wire
(Main)
9763631 Harness, Wire
(Sensor/Dr Switch)
9757339 Harness, Bake
Element (Hidden)
3196520 Clip, Harness
8523279 Wire, Ground
3196173 Screw, Ground
3196154 Screw
313660 Clip – Grnd Wire

Miscellaneous

3196897 Pin Kit-Dr Removal